


SVO ON = SERVO ON RELAY SVO EN = SERVO ENABLE RELAY + 24VDC RELAYS PROVIDED BY CUSTOMER.

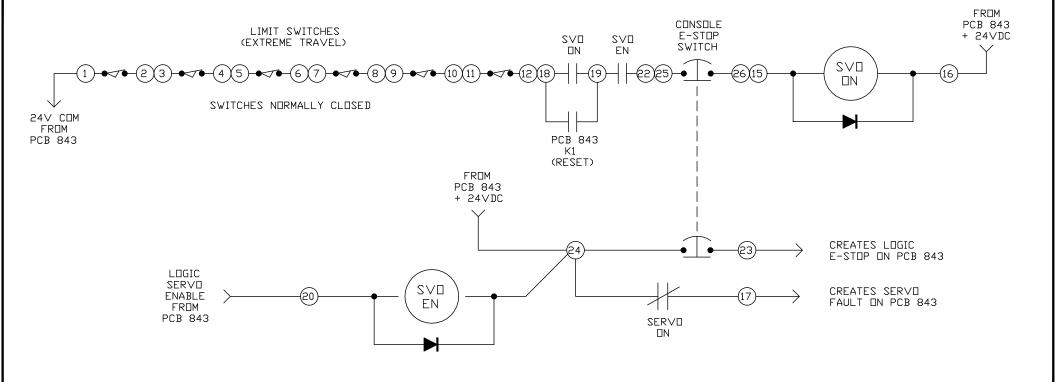



DESCRIPTION

WIRING DIAGRAM, SERVO ON SERIES 1200, DEM

	SCALE NONE		CHECK BY	DATE
	DRAWN BY RM	DATE 3.1.94	APP'D BY	DATE
e.	DRAWING NO.	D000518	SHT 1 OF	1 REV.

All rights reserved. Subject to change without notice.