



INSTALLATION GUIDELINES:


- 1) PERFORM ALL SOFTWARE BEFORE UPDATING THE
- 2) WHEN UPDATING THE H/ MAKE SURE TO FOLLOW GUIDELINES.
- 3) REFER TO DRAWING FOR ON HARDWARE REPLACE
- 4) SHT 1-ILLUSTRATES REI KEYBOARD INTERFACE C
- 5) SHT 2-ILLUSTRATES HA NEED TO BE DISCONNED REPLACED.
- 6) SHT 3-ILLUSTRATES HA NEED TO BE ADDED ANI
- 7) SHT 4-ILLUSTRATES IN GND HARNESS IN SERVI

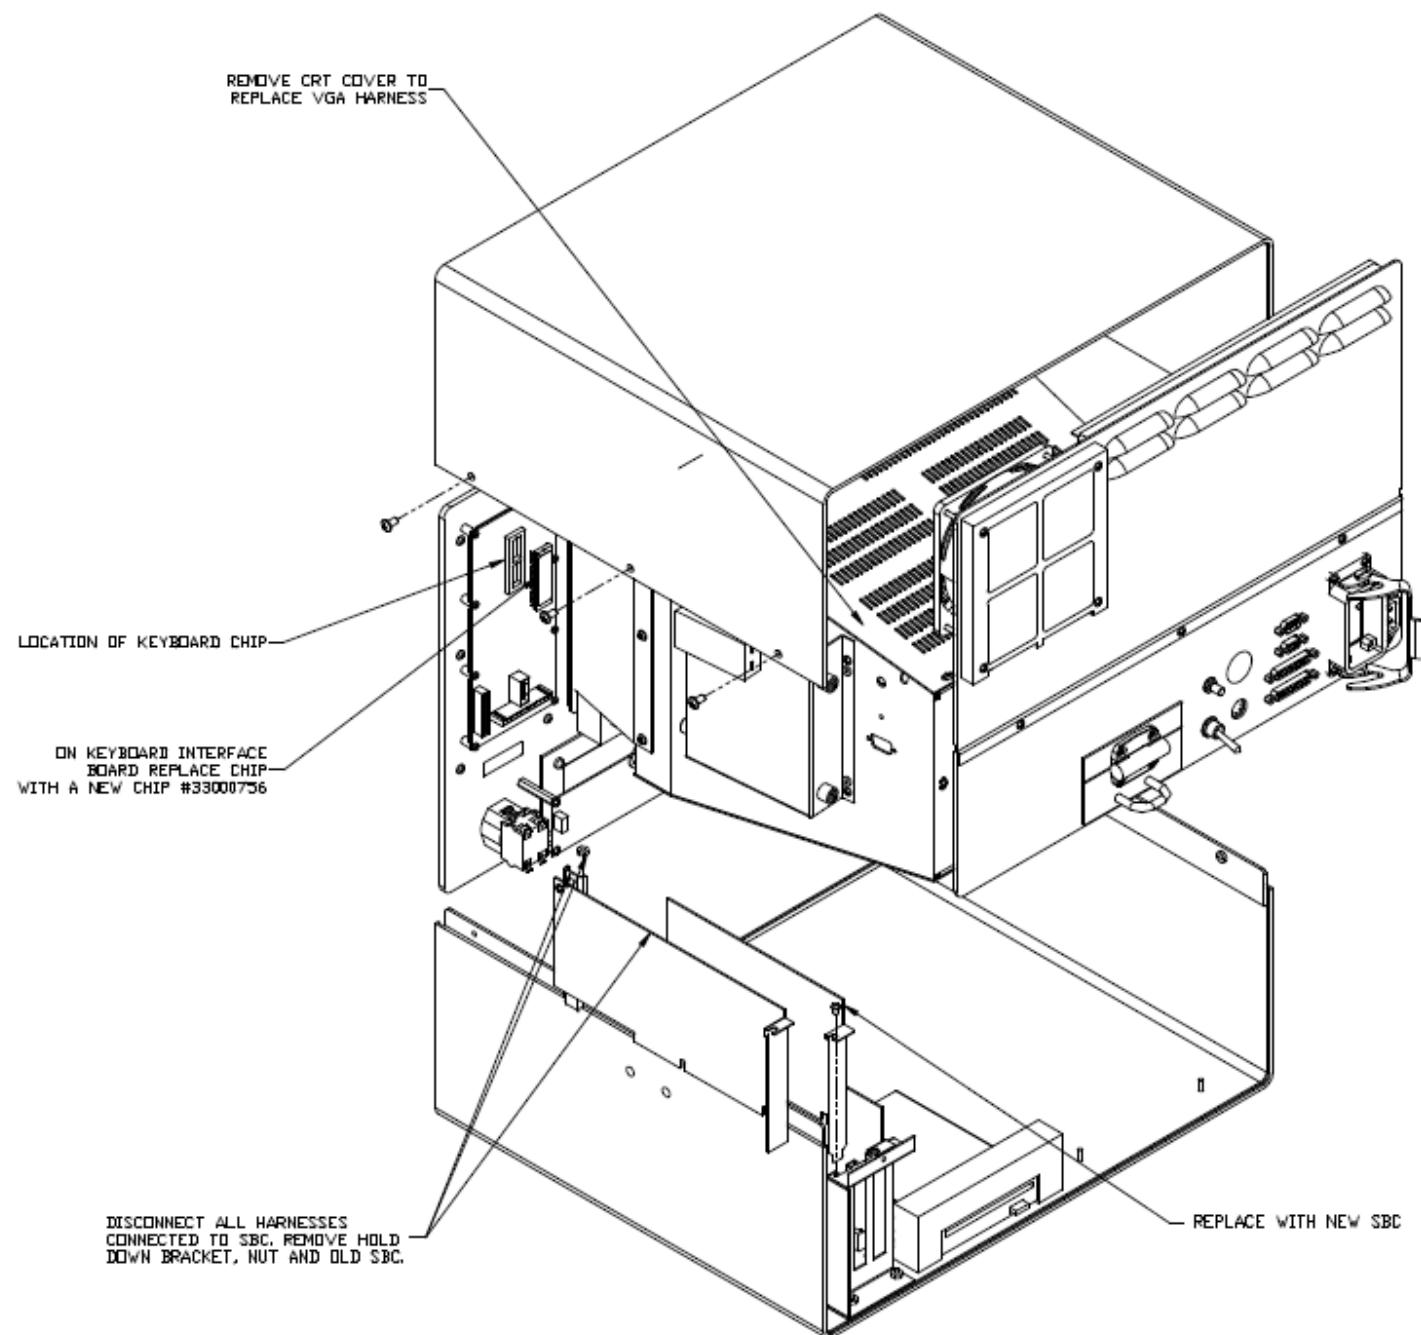


REV.	DATE
1	
ANLAM	
ACU-RITE Company	
DESCRIPTION	
INSTALLATIO	
KEYBOARD INTER	
BOARD COMPUTE	
SCALE: 1/1	
DRAWN BY: 10	DATE: 2/10/88
DRAWING NO.	700004

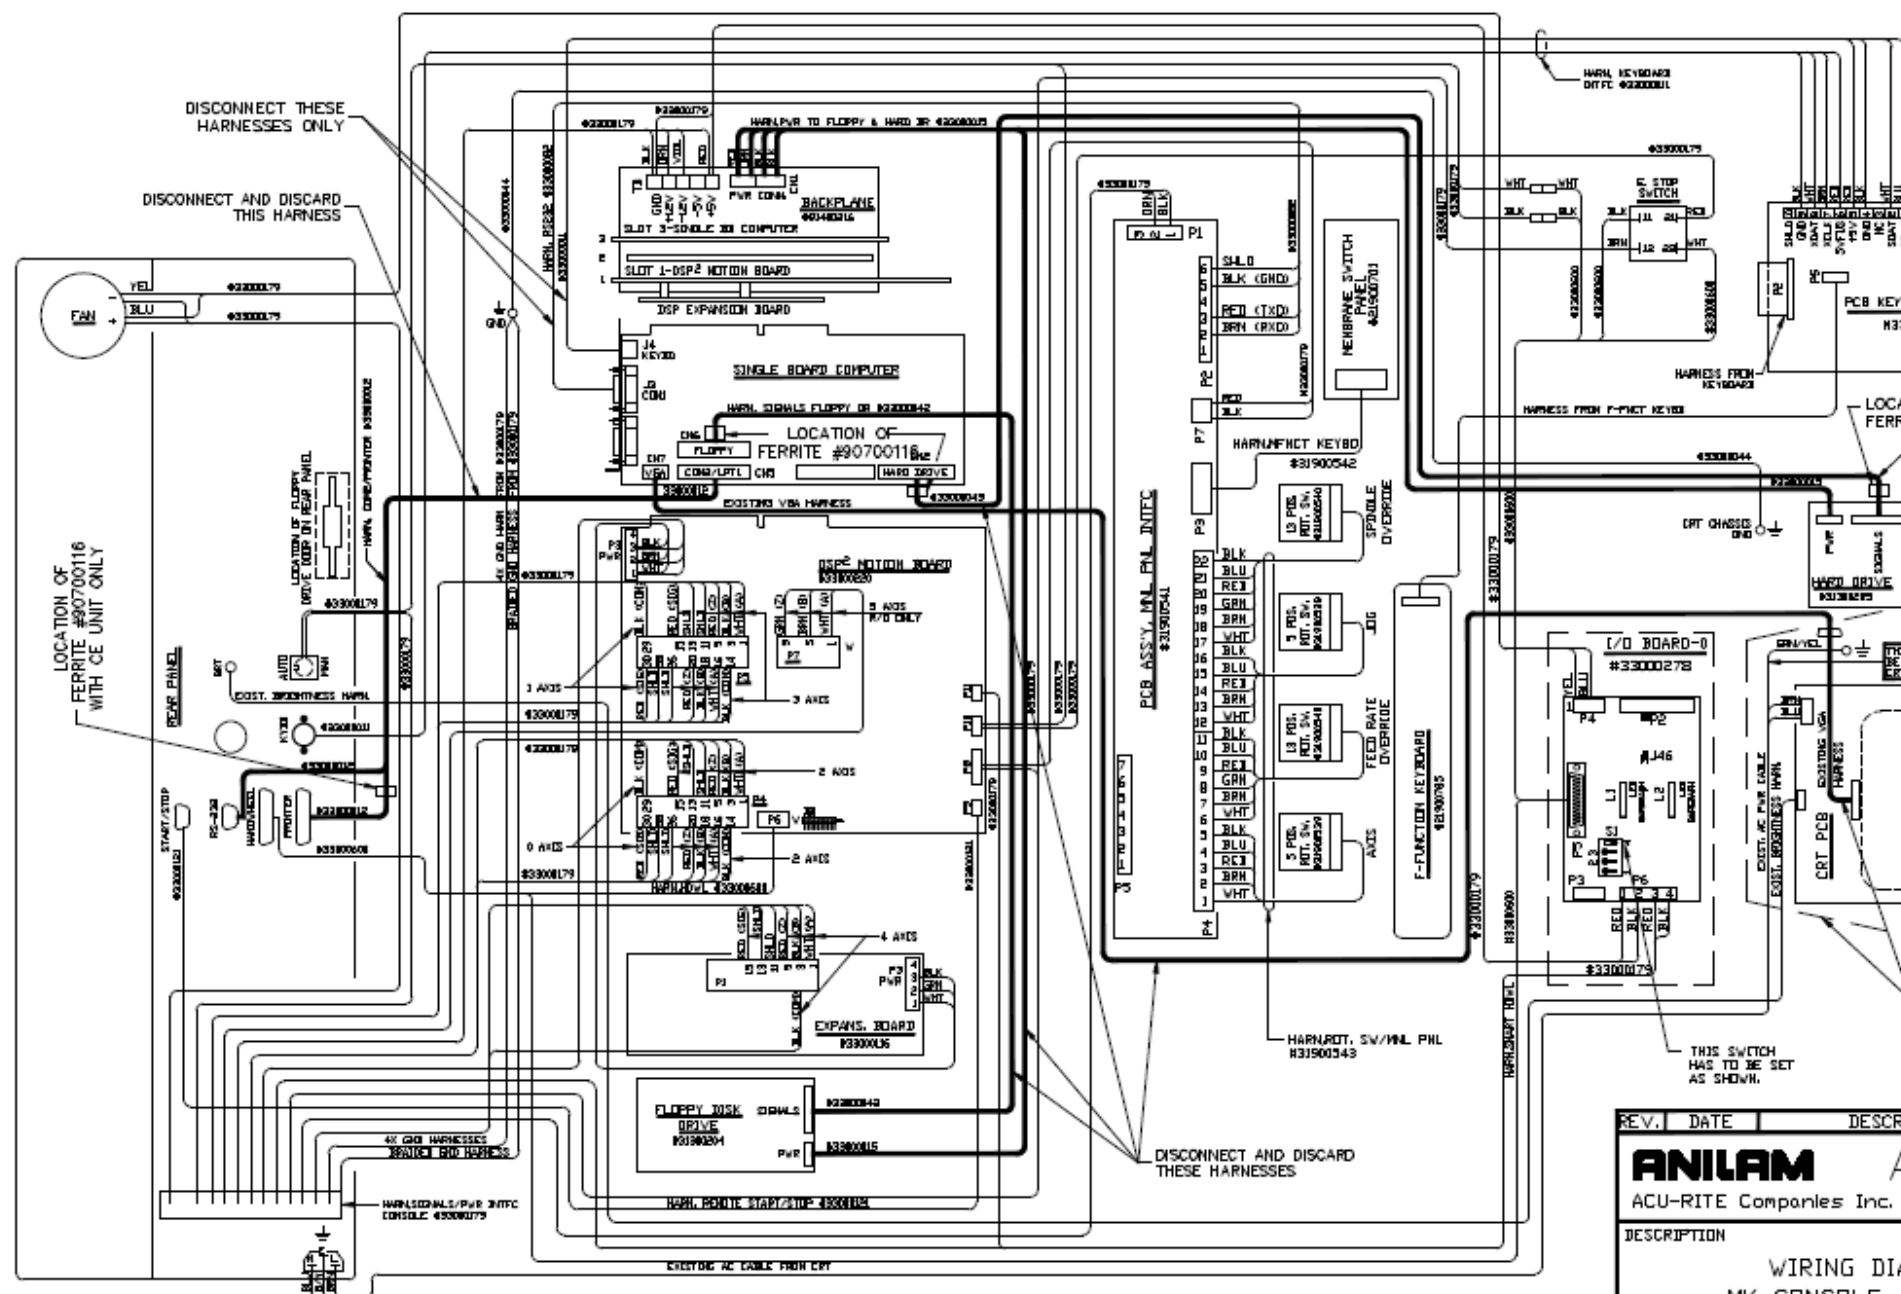

REV.	DATE	DESCR
ANILAM		A
ACU-RITE Companies Inc.		
DESCRIPTION		
WIRING DIA		
MK CONSOLE		
SCALE	NONE	CH
DRAWN BY RTW	DATE 31MARCH 00	AP
DRAWING NO.		
70000480		

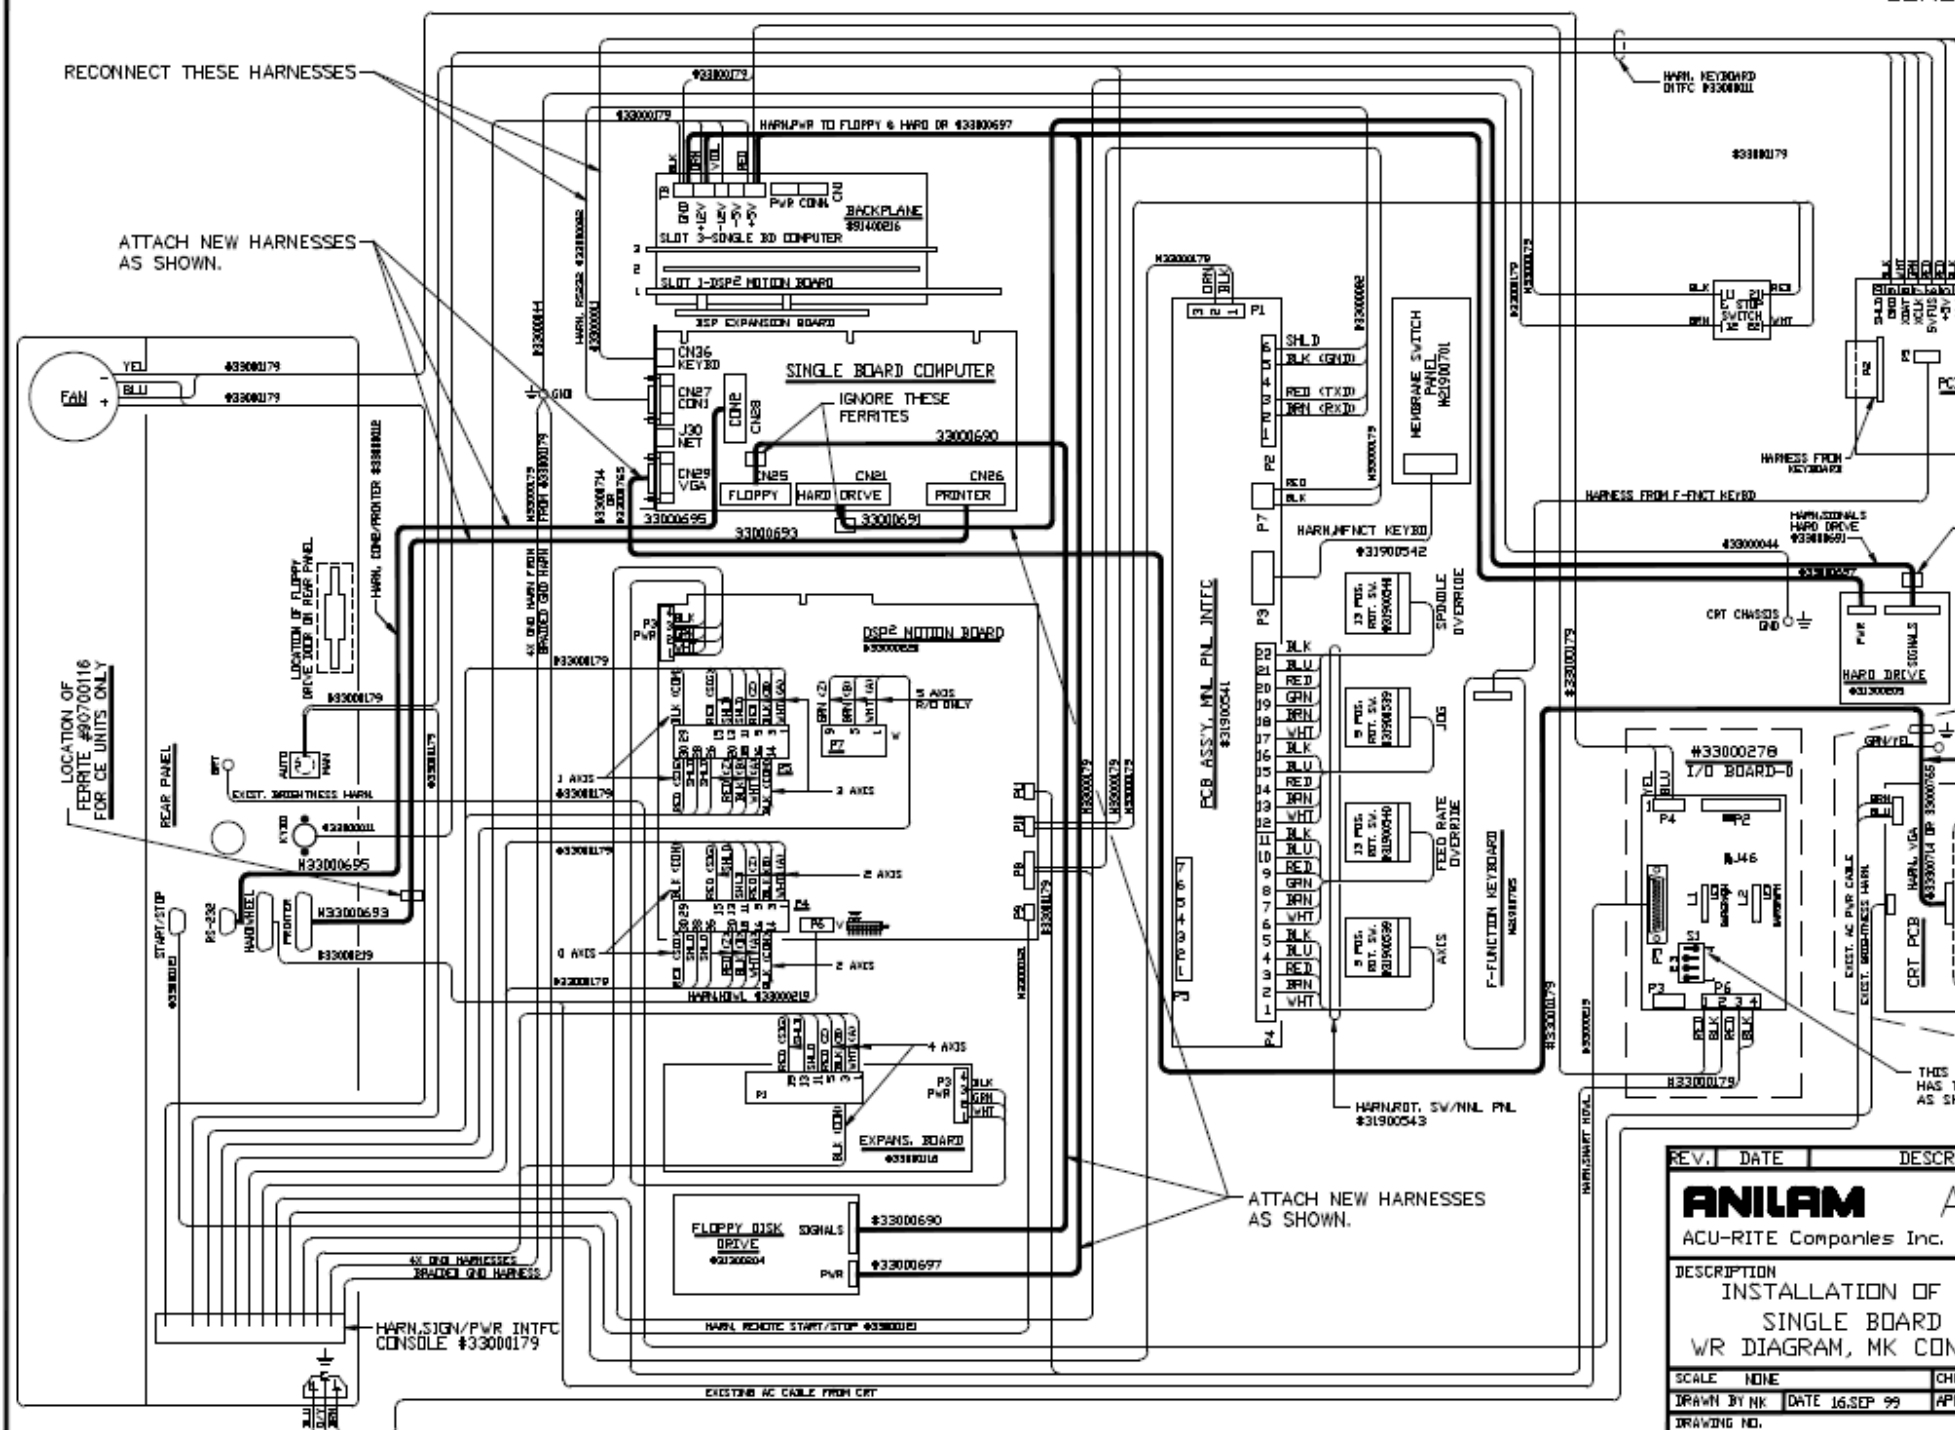

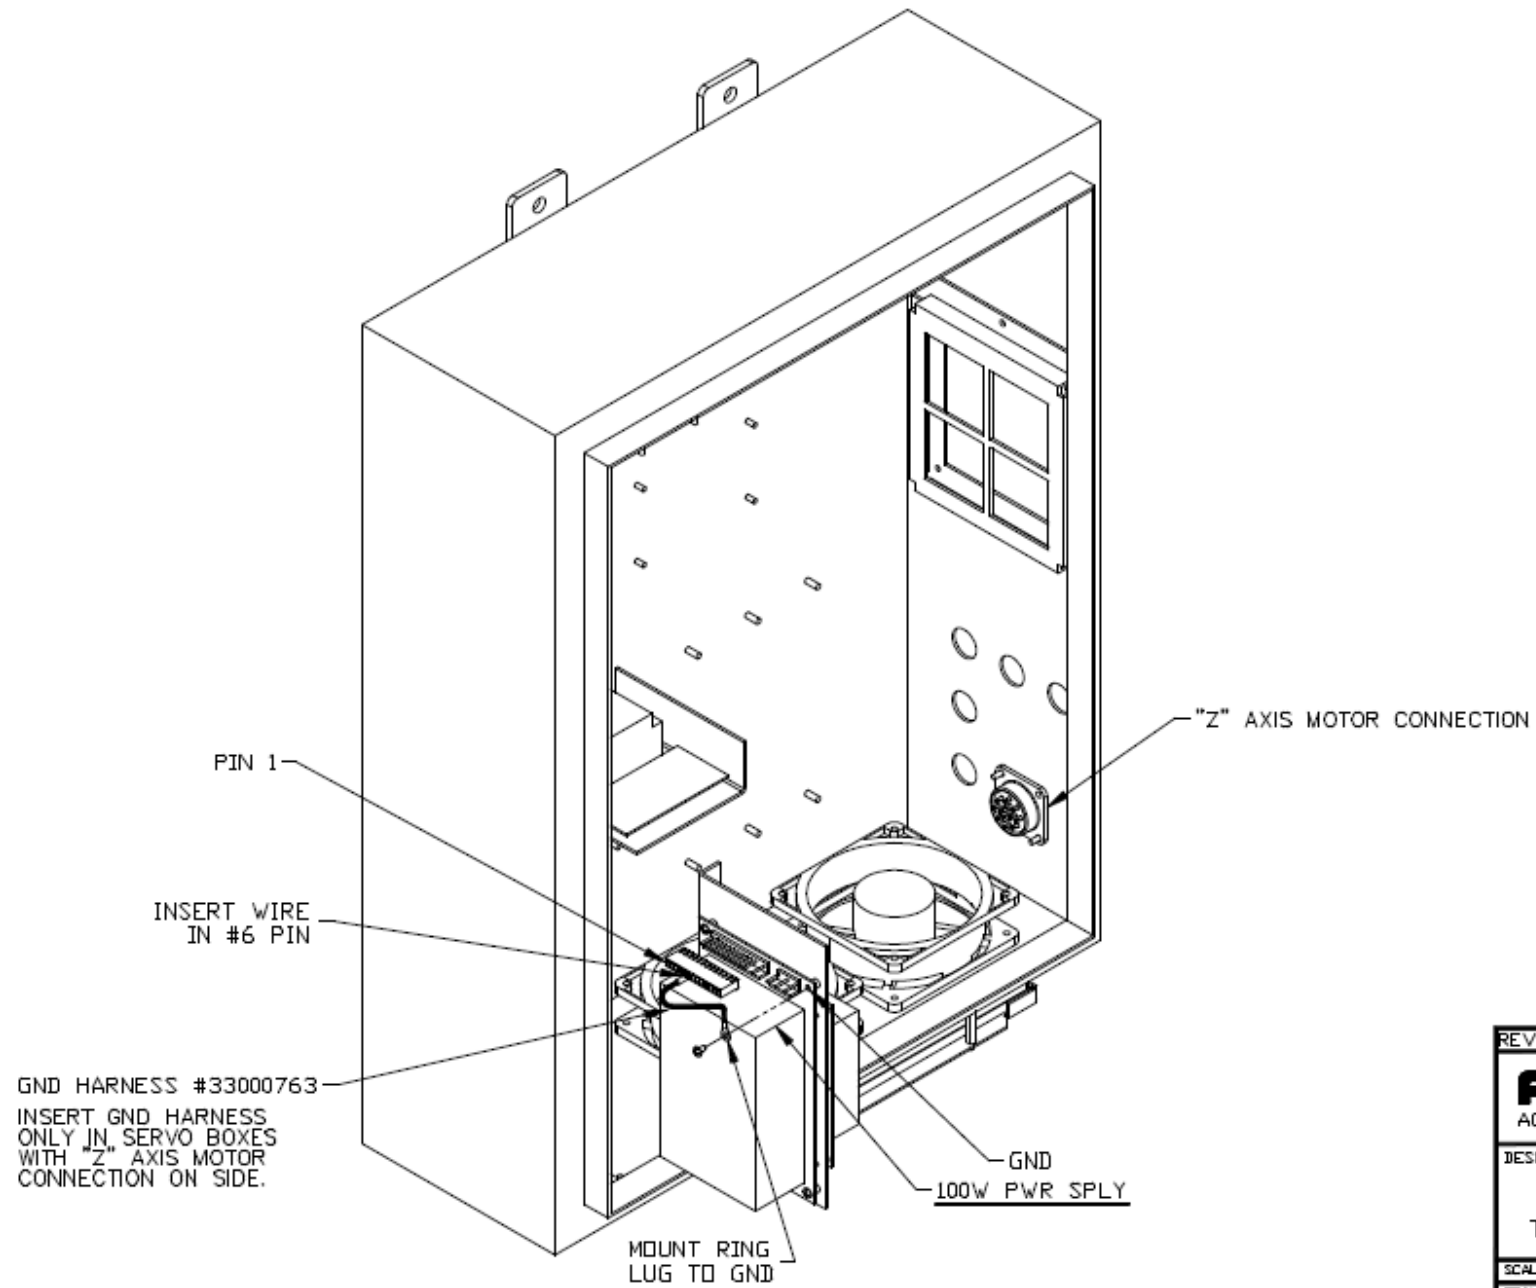

REV.	DATE	DESCRIP
ANILAM ACU-RITE Companies Inc. -		
DESCRIPTION		
INSTALLATION OF GND TO 100W PWR SPLY IN		
SCALE	1:1	CHECK
DRAWN BY	MK	DATE 31 MAR 00
DRAWING NO.	70000480	APP'D